



# Installation Guide


---Simple Beauty Decking

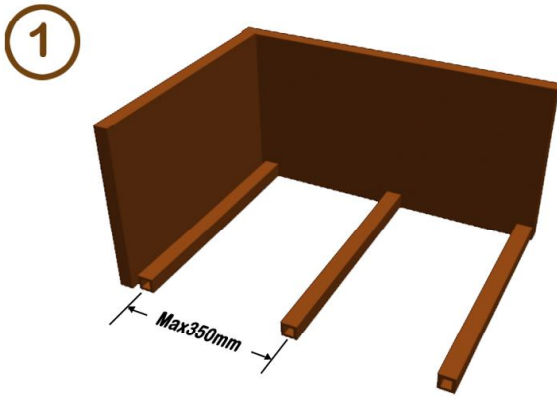


Place the joist on the ground  
Joist Span: 350mm

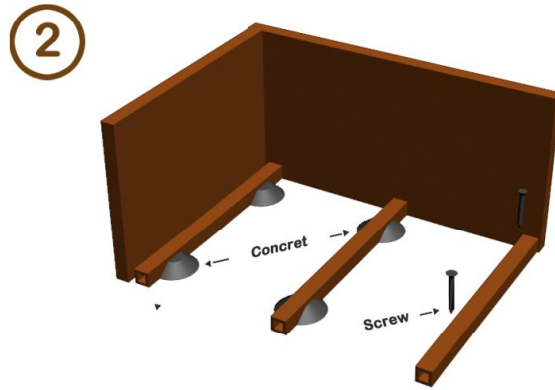


Two ways to fix the Joist: 1. Concrete 2. Screw

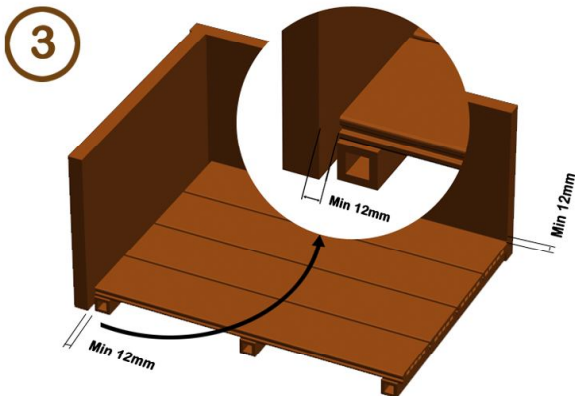


Place the decking on the joist, make sure that the gap between the wall and the decking should be at least 12mm.

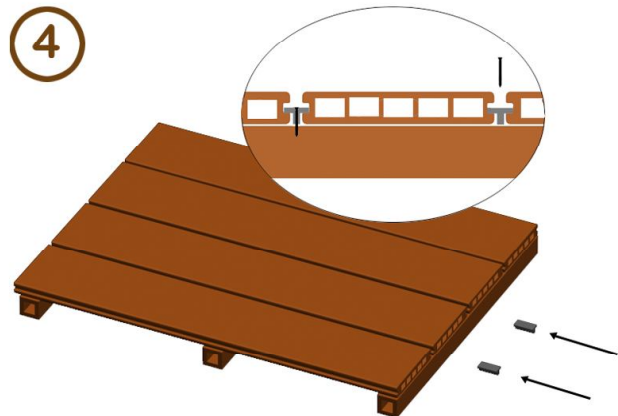


Slip the Clip into the gap between the decking, and screw it in to the joist

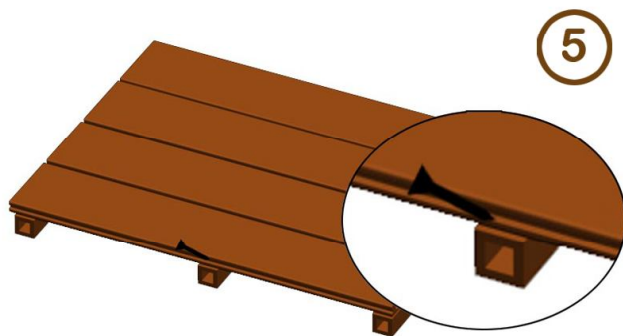

fix the decking and joist with screw from the side groove and in the middle length of decking, Each decking will only need to fix one point.

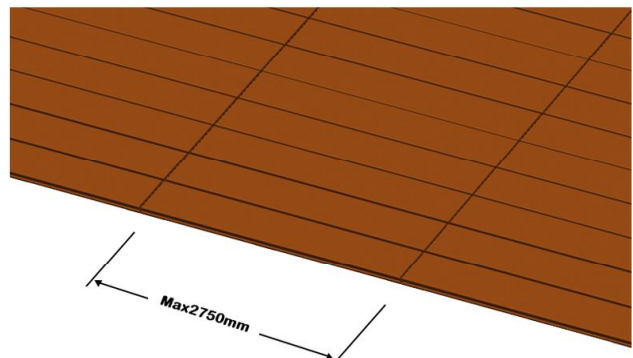

Each decking board should be cut less than 2750mm.

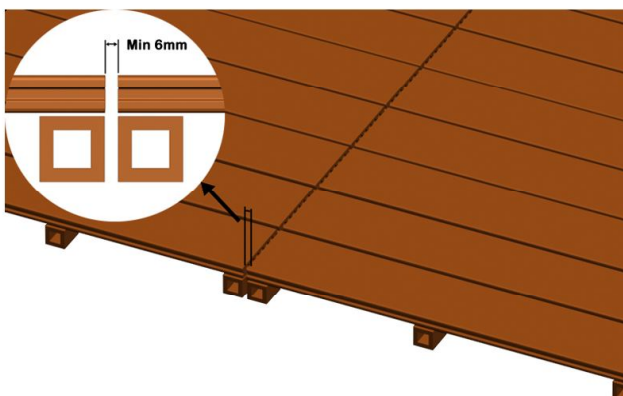

Make sure that the gap between the end of decking should be at least 6mm.



Fix the side panel to the parallel joist or decking board.